



Step #1

Insert provided screw into the countersunk hole in the stainless bracket and screw securely into the predrilled hole in leg

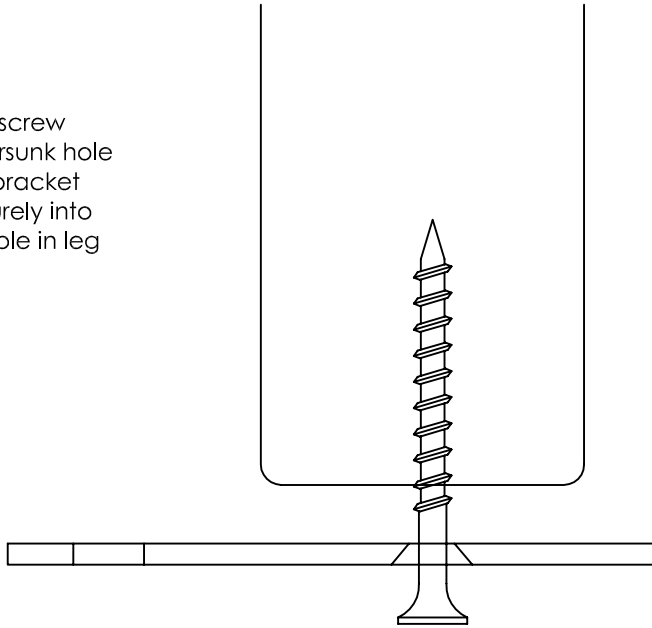

Step #2

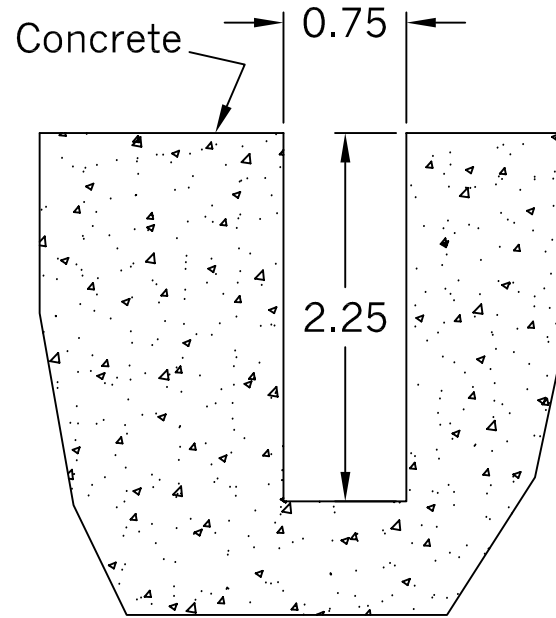

Ground Anchor Assembly


Questions Contact
419-678-3300 or
sales@polyconceptslc.com

- Package Contents
- * 1 S.S. Bracket
 - * 1 Anchor
 - * 1 3/8" x 2" Anchor Screw
 - * 1 S.S. #12 x 2-1/2" Screw


Drill 3/4" hole 2-1/4" deep into concrete for the expansion anchor.

Step #3

Insert anchor into concrete hole. Align the assembled bracket over the hole in the anchor.

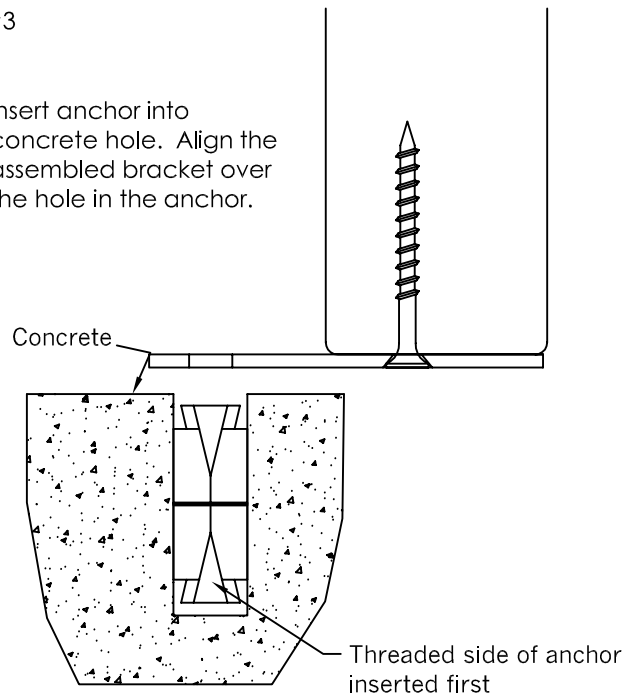

Step #4

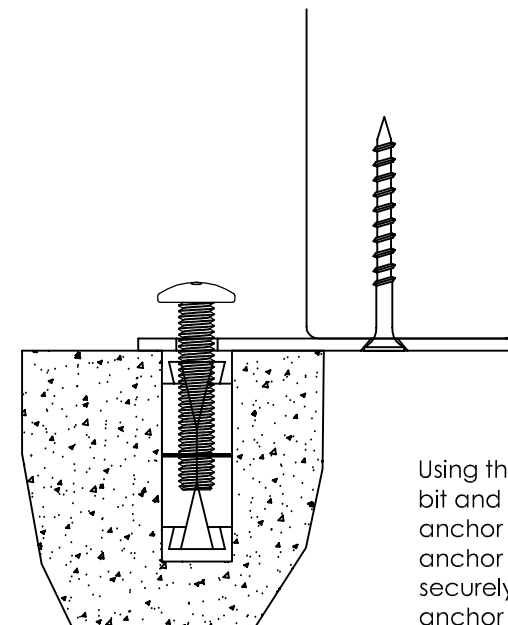

Using the provided insert bit and a drill screw the anchor screw into the anchor until it is tight and securely holds the anchor into the ground