



Step #1

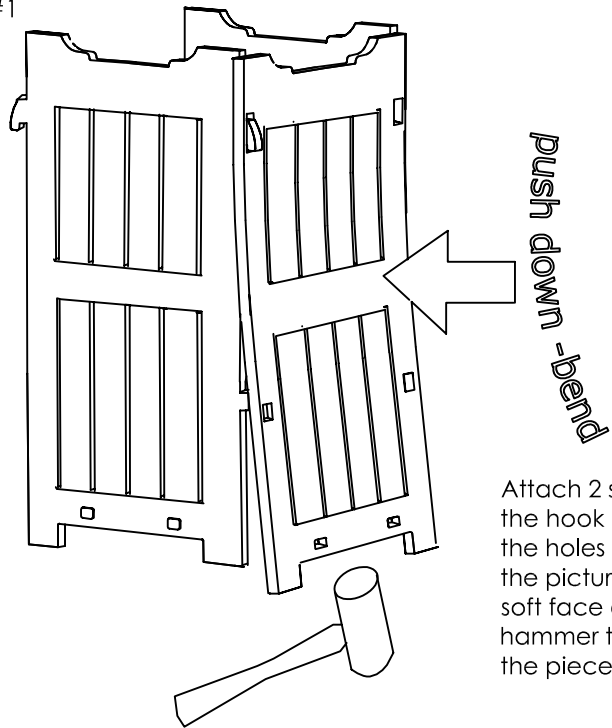

Attach 2 sides with the hook to one with the holes as shown in the picture. Use a soft face or plastic hammer to help lock the pieces together

Step #2

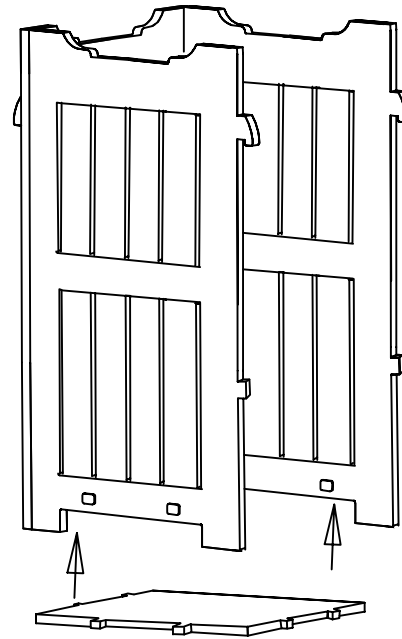


After 3 sides are together insert the bottom into the holes at the bottom of the sides.

Jefferson Litter Receptacle Assembly

Questions Contact
419-678-3300 or
sales@polyconceptslc.com


- Package Contents
- * 2 sides w/ hooks
 - * 2 sides w/ holes
 - * 1 bottom
 - * 1 top
 - * 8 #7 x 1-5/8" ss screws
 - * 1 - t-15 drive bit

Step #3

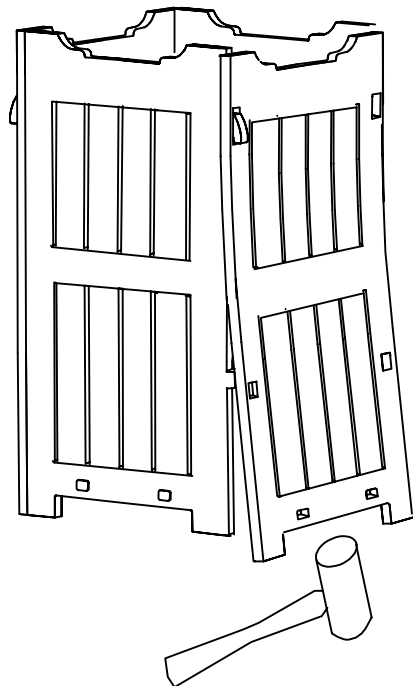

After the bottom is in, hook the last side to the the 3 already together.

Step #4

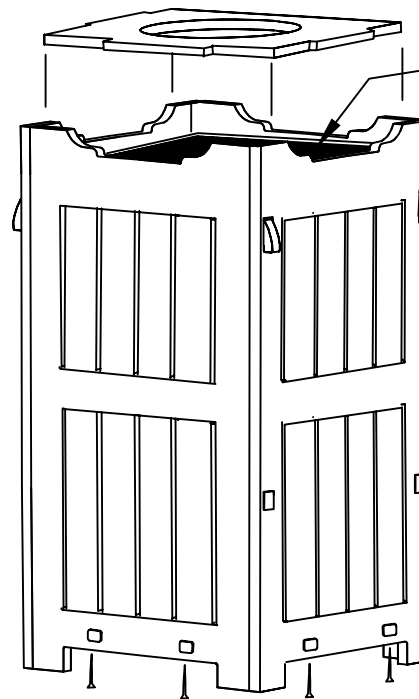

Optional Rubbermaid Liner #5M746

Place top cover on the litter receptacle and insert the screws into the predrilled holes in the bottom of the litter receptacle.